



1500 PSI (103 bar, 10,300 kPa). Maximum pressure for the high pressure pump is 3000 PSI (106 bar, 20,600 kPa). Either pump can be less flow. Maximum power is required when the low pressure pump unloads and its flow goes to tank. The minimum pressure for the low pressure pump should be 500 PSI (34 bar, 3450kPa).

Contact your local hydraulic pump distributor to calculate the correct pump size for your engine. You will need to know the engine high idle RPM and power rating to determine pump section sizes.You must have a pressure relief on the outlet (V) port or you could damage the high pressure pump.



ITEM No. QTY. PART No. DESCRIPTION REMARKS 1 1 DP0087 2 STAGE PUMP UNLOADER MANIFOLD 2 1 XH0003 5/32" EXPANSION PLUG, CVES1561110A 3 1 VHH075 CHECK VALVE, HydraForce CV12-20-0-N-30 4 1 VHB005 Sequence, Unloader Valve, Bucher HSLL-10-N-0-12 Set To Use All Engine Power

Specification subject to change without notice.